

P-Ecke Bochum mit Armlehnen



- DE

Montageanleitung
- IT

Istruzioni di montaggio
- PL

Instrukcja montażu
- FR

Notice de montage
- NL

Handleiding voor de montage
- RO

Instrucțiuni de asamblare
- GB

Assembly Instructions
- SK

Montážny návod
- TR

Montaj talimatı
- CZ

Montážní návod
- HU

Szerelési útmutató
- RU

Инструкция по монтажу









Service - Servis - Dienstverlening - Servis - Servis - Сервисная служба - Servizio - Service
Serviciu - Služby - Szolgálatás





Name - Nazwa - Naam - Name - Имя - название
Nome - Nom - Numele - Meno - Jméno - Neve

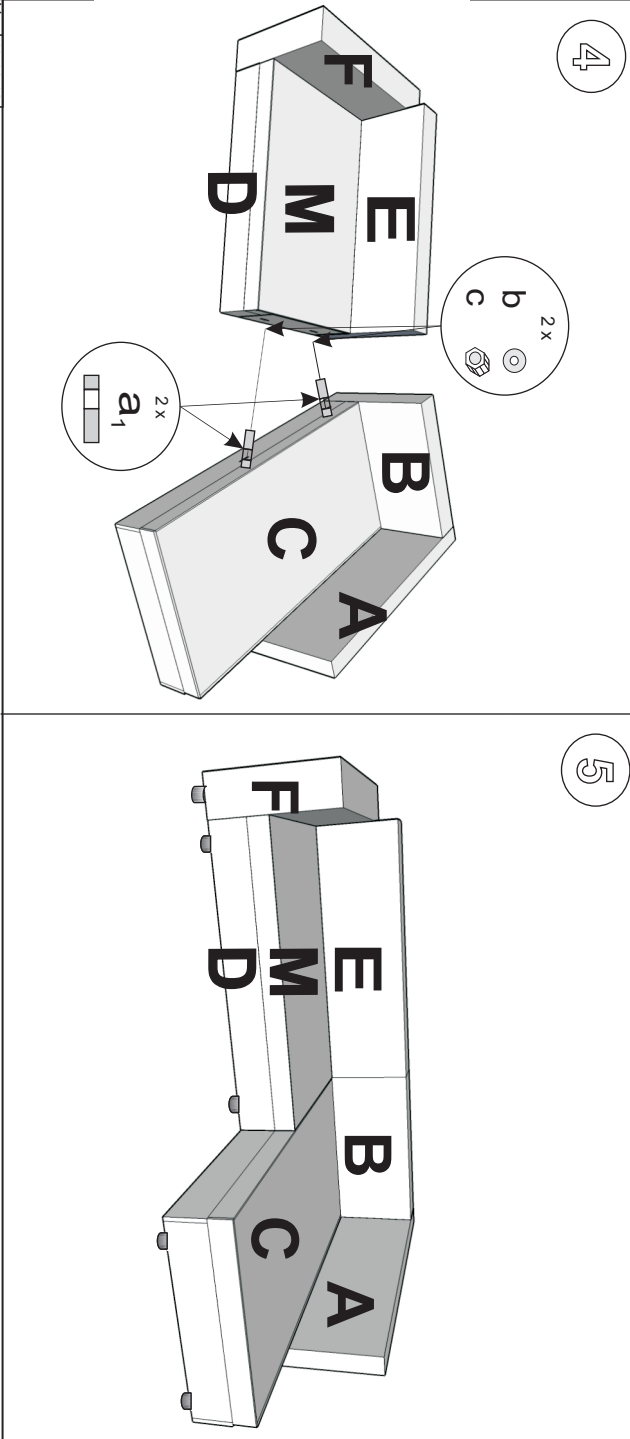
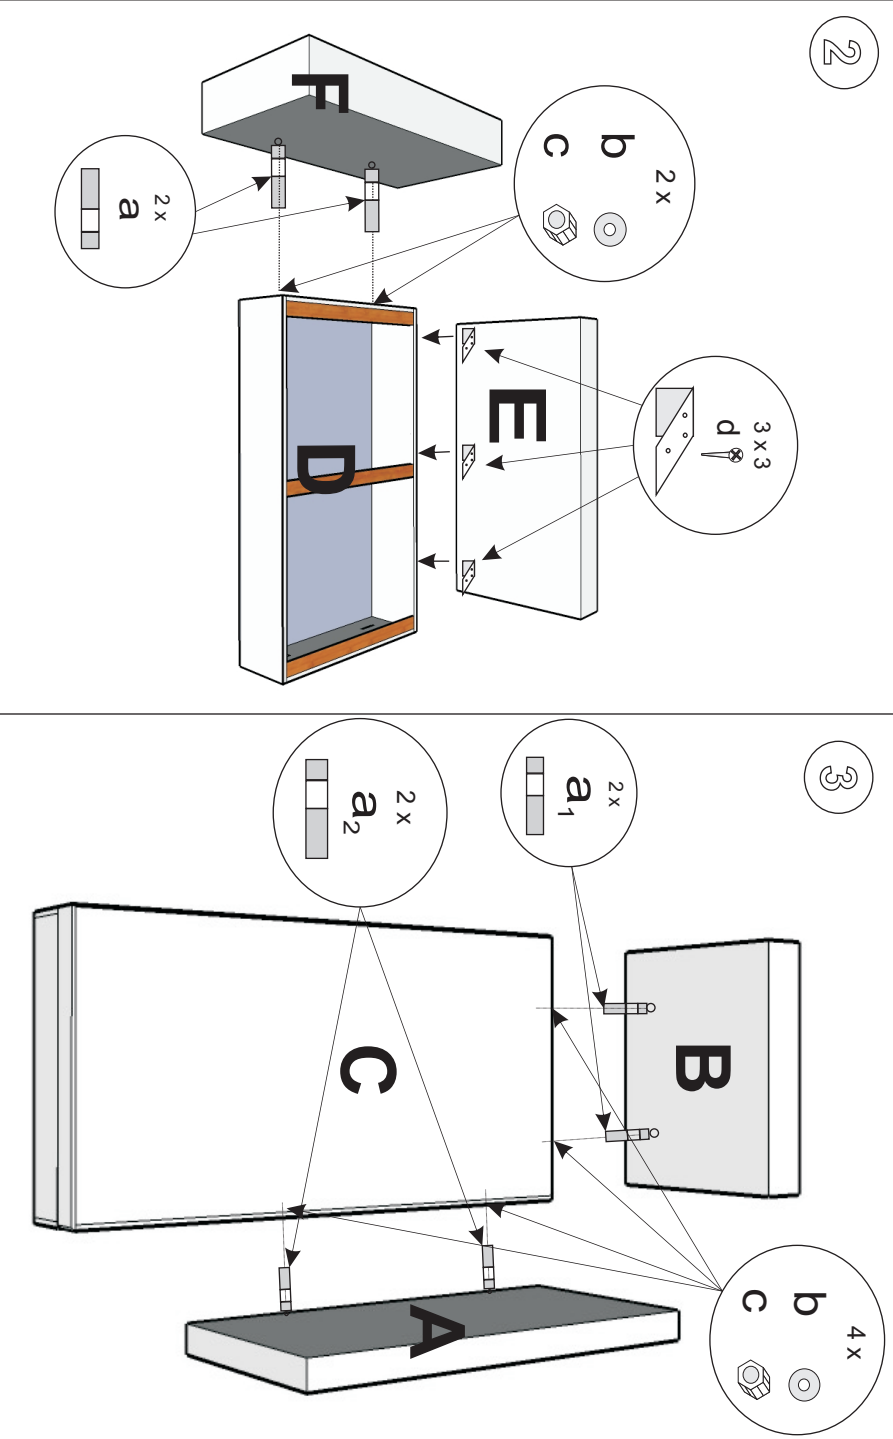
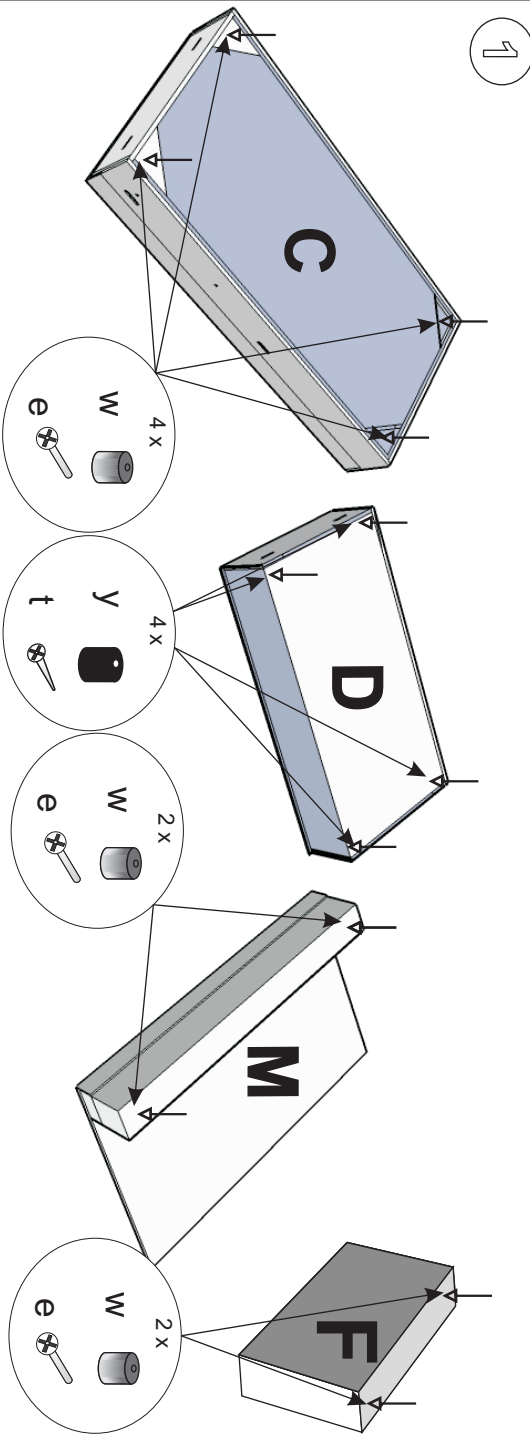

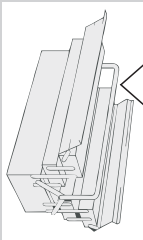

P-Ecke Bochum mit Armlehnen

1:1 L



2 x (8x60)	4 x (8x70)	2 x (8x80)	8 x Ø8	8 x M8	9 x (4x16)	8 x 50mm	4 x (5x50)
							
a	a ₁	a ₂	b	c	d	w	t

8 x (M6x35)	4 x 50mm	2 x 38 cm	4 x 65cm
			
e	y	1	2



P-Ecke Bochum mit Armlehnen



DE Montageanleitung
PL Instrukcja montażu
NL Handleiding voor de montage
GB Assembly instructions
TR Montaj talimatı
RU Инструкция по монтажу

IT Istruzioni di montaggio
FR Notice de montage
RO Instrucțiuni de asamblare
SK Montážny návod
CZ Montážní návod
HU Szerelési útmutató

Service - Servis - Dienstverlening - Servis - Servis - Сервисная служба - Servizio - Service
Serviciu - Služby - Szolgáltatás

Name - Nazwa - Naam - Name - Isim - название
Nome - Nom - Numele - Meno - Jméno - Neve

P-Ecke Bochum mit Armlehnen

2:P



2 x (8x60) a	4 x (8x70) a₁	2 x (8x80) a₂	8 x Ø8 b	8 x M8 c	9 x (4x16) d	8 x 50mm 50mm W	4 x (5x50) t
2 x (8x60) a	4 x (8x70) a₁	2 x (8x80) a₂	8 x Ø8 b	8 x M8 c	9 x (4x16) d	8 x 50mm 50mm W	4 x (5x50) t
8 x (M6x35) e	4 x 50mm 50mm y	2 x 38 cm 38 cm 1	4 x 65cm 45cm 2	8 x (M6x35) e	4 x 50mm 50mm y	2 x 38 cm 38 cm 1	4 x 65cm 45cm 2

